
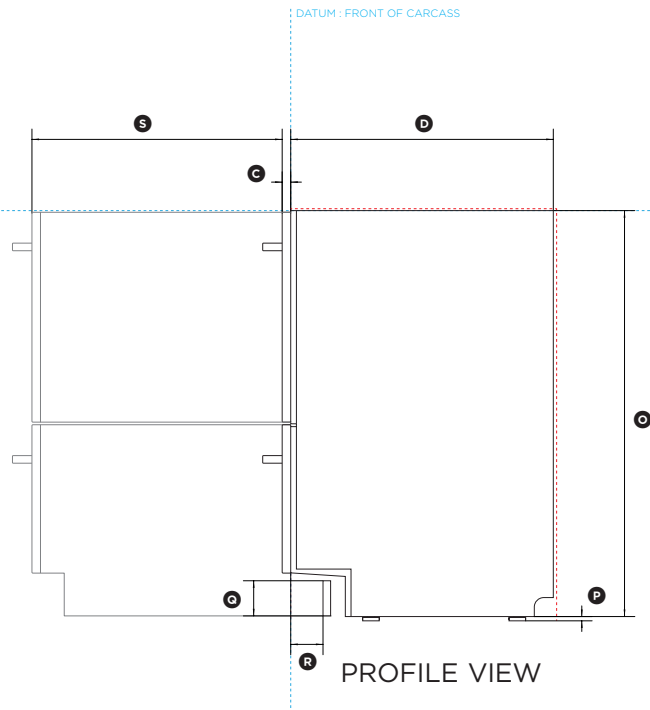
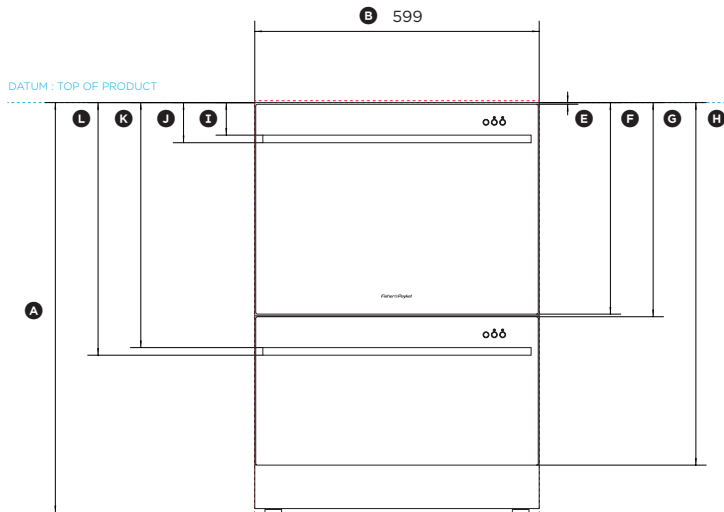


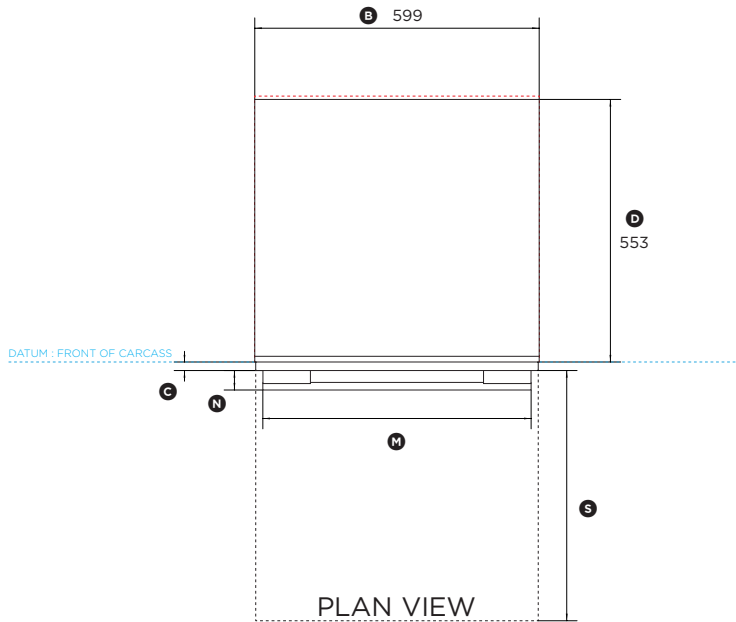

600mm Double DishDrawer™ Tall

Model no:

DD24DDFTX7 (refer page 2 for imperial measurements)

Product Dimensions	mm
Ⓐ Overall height* of DishDrawer™	864 - 924
Ⓑ Overall width of DishDrawer™	599
Ⓒ Depth of DishDrawer™ front panel (excludes handle)	18
Ⓓ Depth of DishDrawer™ chassis	553
Ⓔ Height from top datum to top of top drawer panel	4
Ⓕ Height from top datum to bottom of top drawer panel	446
Ⓖ Height from top datum to top of bottom drawer panel	451
Ⓗ Height from top datum to bottom of bottom drawer panel	764
Ⓙ Height from top datum to top of top handle	69
Ⓚ Height from top datum to bottom of top handle	85
Ⓛ Height from top datum to top of bottom handle	516
Ⓜ Height from top datum to bottom of bottom handle	532
Ⓝ Width of handle	565
Ⓟ Depth of handle measured from front of drawer	41
Ⓢ Height of chassis at rear (not including mounted feet)	855
Ⓣ Height of mounted feet (adjustable)	9 - 69
Ⓤ Height of toekick panel (adjustable)	70 - 120
Ⓡ Depth of toekick panel (adjustable)	30 - 92
Ⓦ Depth of drawer (open) (measured from front drawer panel) excluding handle	545

* Includes adjustable mounted feet and the range of movement.

Note: Service outlet at rear extends both sides, hoses and cords can be routed to either or both.



Minimum Clearances	mm
Minimum inside height of cavity from bottom datum	864
Minimum inside width of cavity	600
Minimum inside depth of cavity from front datum	560

INDICATES CABINETRY CARCASS DATUM
INDICATES MINIMUM CABINETRY CLEARANCES


DATE: **05.05.2014**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

Fisher & Paykel

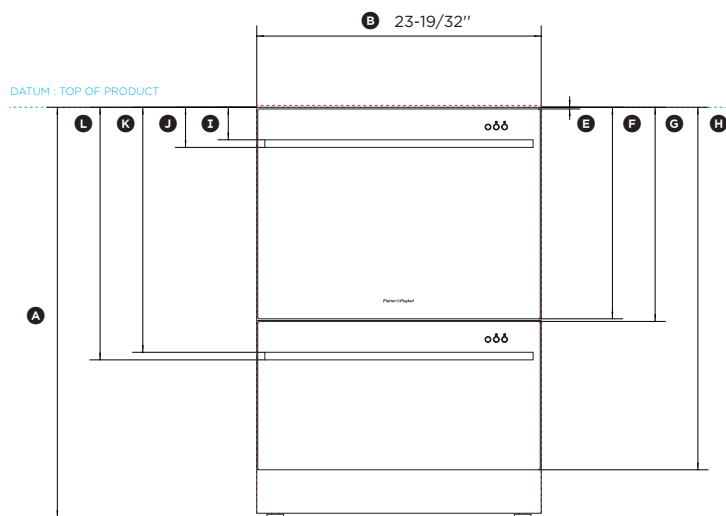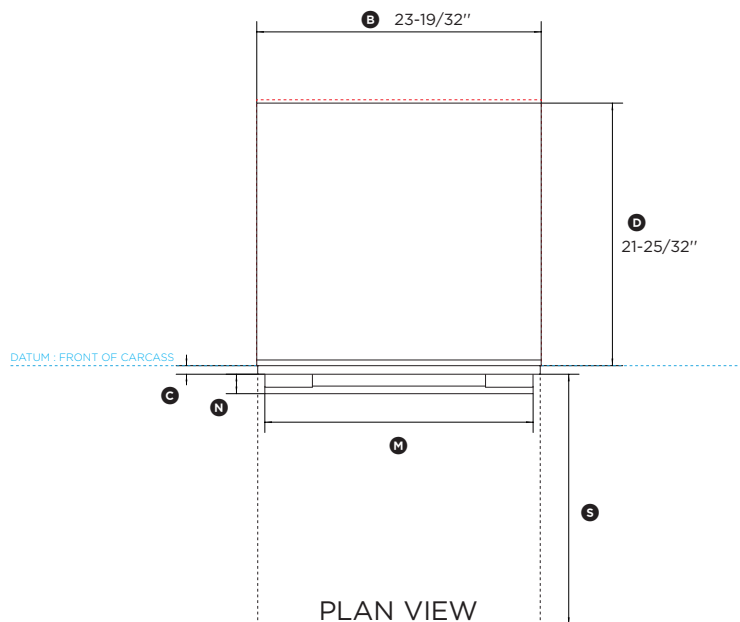

FRONT VIEW

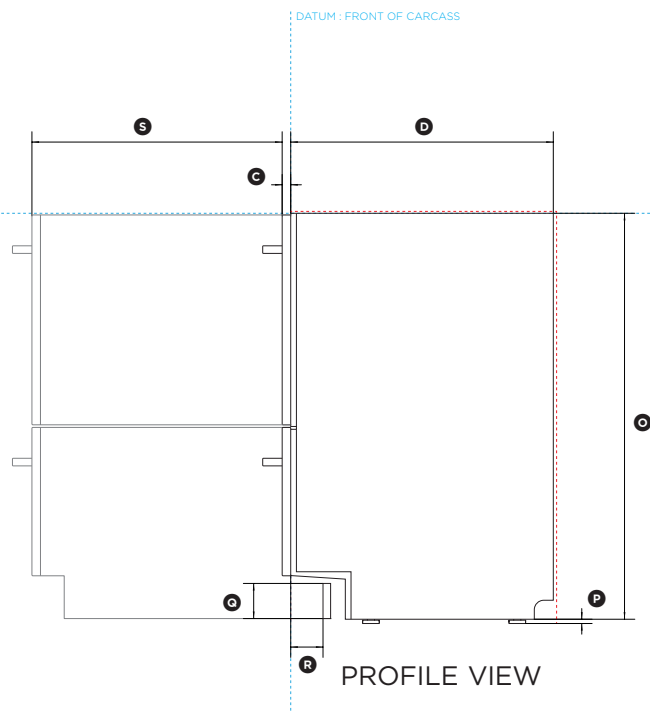

PROFILE VIEW

24" Double DishDrawer™ Tall

Model no:

DD24DDFTX7 (refer page 1 for metric measurements)

Product Dimensions	in
Ⓐ Overall height* of DishDrawer™	34- ¹ / ₃₂ " - 36- ⁵ / ₁₆ "
Ⓑ Overall width of DishDrawer™	23- ¹⁹ / ₃₂ "
Ⓒ Depth of DishDrawer™ front panel (excludes handle)	²³ / ₃₂ "
Ⓓ Depth of DishDrawer™ chassis	21- ²⁵ / ₃₂ "
Ⓔ Height from top datum to top of top drawer panel	⁵ / ₃₂ "
Ⓕ Height from top datum to bottom of top drawer panel	17- ⁹ / ₁₆ "
Ⓖ Height from top datum to top of bottom drawer panel	17- ³ / ₄ "
Ⓗ Height from top datum to bottom of bottom drawer panel	30- ³ / ₃₂ "
Ⓛ Height from top datum to top of top handle	2- ²³ / ₃₂ "
Ⓜ Height from top datum to bottom of top handle	3- ¹¹ / ₃₂ "
Ⓢ Height from top datum to top of bottom handle	20- ⁵ / ₁₆ "
Ⓤ Height from top datum to bottom of bottom handle	20- ¹⁵ / ₁₆ "
Ⓦ Width of handle	22- ¹ / ₄ "
Ⓢ Depth of handle measured from front of drawer	1- ⁵ / ₈ "
Ⓢ Height of chassis at rear (not including mounted feet)	33- ²¹ / ₃₂ "
Ⓟ Height of mounted feet (adjustable)	¹ / ₃₂ " - 2- ²³ / ₃₂ "
Ⓢ Height of toekick panel (adjustable)	2- ³ / ₄ " - 4- ²³ / ₃₂ "
Ⓡ Depth of toekick panel (adjustable)	1- ³ / ₁₆ " - 3- ⁵ / ₈ "
Ⓢ Depth of drawer (open) (measured from front drawer panel) excluding handle	21- ¹⁵ / ₃₂ "

* Includes adjustable mounted feet and the range of movement.

Note: Service outlet at rear extends both sides, hoses and cords can be routed to either or both.

Minimum Clearances	in
Minimum inside height of cavity from bottom datum	34- ¹ / ₃₂ "
Minimum inside width of cavity	23- ⁵ / ₈ "
Minimum inside depth of cavity from front datum	22- ¹ / ₁₆ "

INDICATES CABINETRY CARCASS DATUM - - - - -
INDICATES MINIMUM CABINETRY CLEARANCES - - - - -

DATE: **05.05.2014**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

Fisher & Paykel