


Model no:

RF170WDLUX4, RF170WDLUX5

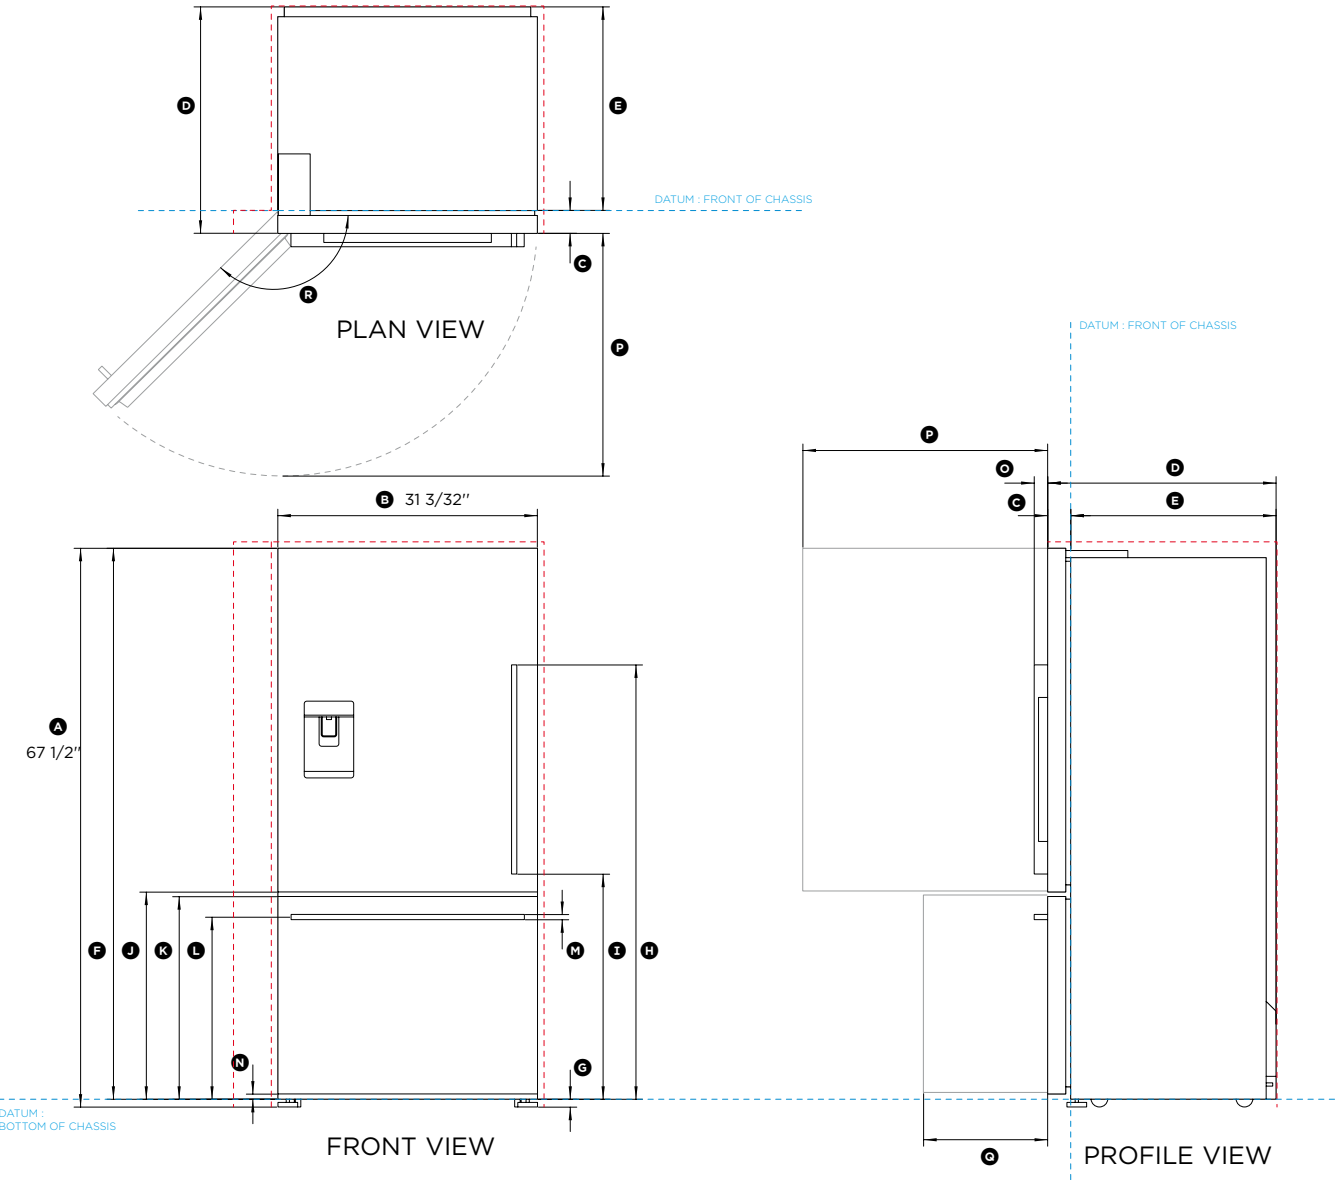

Product Dimensions	in
Ⓐ Overall height* of fridge	67 1/2"
Ⓑ Overall width of fridge	31 3/32"
Ⓒ Depth of fridge door and gasket (excludes handle)	2 3/4"
Ⓓ Depth of fridge door and chassis (excludes handle)	27 3/8"
Ⓔ Depth of fridge chassis (does not include fridge door)	24 5/8"
Ⓕ Height from bottom datum to top of fridge door	66 9/16"
Ⓖ Height of feet (adjustable)	15/16"
Ⓗ Height from bottom datum to top of top handle	52 3/8"
Ⓘ Height from bottom datum to bottom of top handle	27 1/8"
Ⓛ Height from bottom datum to bottom of top door	25 5/32"
Ⓜ Height from bottom datum to top of bottom door	24 21/32"
Ⓢ Height from bottom datum to centerline of bottom handle	22 3/16"
Ⓟ Thickness of handles	5/8"
Ⓡ Height from bottom datum to bottom of bottom door	13/16"
Ⓣ Depth of handle (measured from front of door)	1 5/8"
Ⓟ Depth of door (open at 90°) (measured from front of door)	29 5/16"
Ⓢ Depth of drawer (open) (measured from front of drawer) excluding handle	14 3/4"
Ⓡ Rotation of door (open)	138°

* Includes mounted feet

Minimum Clearances	in
Minimum height of cavity	68 5/16"
Minimum side clearance installed flush with chassis	25/32"
Side clearance (hinge side) - installed flush with door - full rotation	5 5/16"
Rear clearance (including evaporator tray)	1 3/16"

INDICATES PRODUCT DATUM
INDICATES CABINETY CLEARANCES

DATE: 06.10.2015

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com